

## PARAGON INFLATABLE KAYAK FOLDING INSTRUCTIONS



1. Remove the skeg from the bottom of the kayak, find a flat clean surface, and lay the Paragon down.



2. Remove the seat by loosening the straps, unhook them from the D-rings, and undo the hook and loop supports beneath the seat.



3. Remove the footpegs.



4. Deflate the three air chambers by pushing in the stem in the middle of the valve and turning it to the left (counterclockwise).



5. Take the side tubes and fold them in half lengthwise.



6. Take the keel on the bow and fold it perpendicular to the bottom of the kayak and fold toward the middle of the inflatable. Be careful not to bend the fin plate.



7. Repeat this for the stern. Make sure the keels are folded perpendicular to the kayak and facing opposite directions.



8. Make the final fold, place the inflatable in the carry bag, and strap it in. Don't forget the seat, foot pegs, and the skag! Now it's stored away and ready for the next adventure.